

3 Track Universal Chaser Controller Setting & Mounting Instructions


Model 3TU-10

4 Lighting Patterns to Choose From!

Important: Before removing the front cover, unplug the Power Cord to avoid electrical shock and/or damage to the unit.

Note: When the two Brass Posts are covered with one of the Jumpers, the circuit is closed. When only one post or neither post is covered, the circuit is open.


Remove the screw in the front panel. Use a small pair of Needle Nose Pliers to slide the Jumpers on or off the posts.

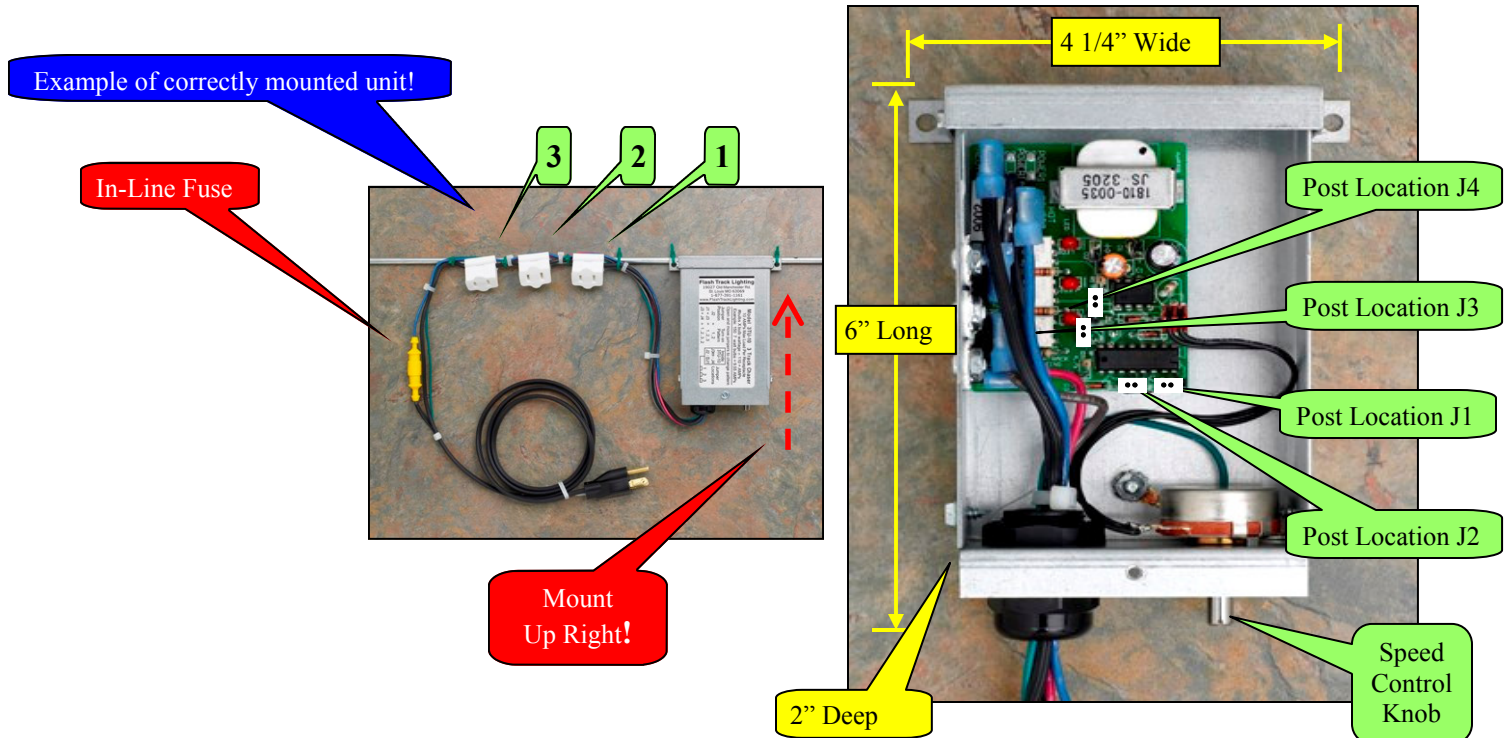

By rearranging the Jumpers you can select one of the following four chase patterns.

	2TC	3TC	3PA	4TC
Description:	2 Track Chase	3 Track Chase	3 Position Animation	3 Track with Blank
Steps:	2	3	4	4
Pattern:	1, 2, repeat	1, 2, 3, repeat	1, 2, 3, 2, repeat	1, 2, 3, blank, repeat
Jumpers Closed:	J2	J1 & J3	J3 & J4	J2 & J3

Standard Setting

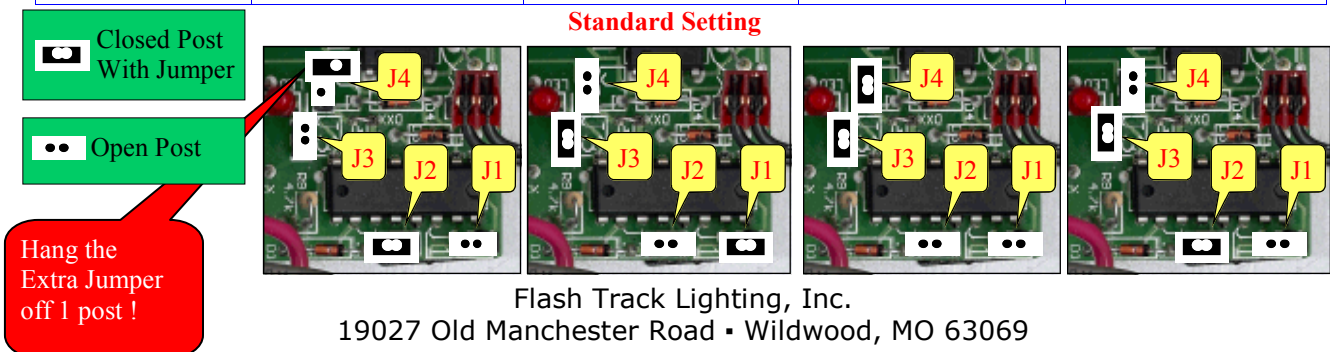

Flash Track Lighting, Inc.
 19027 Old Manchester Road • Wildwood, MO 63069
 636.391.1161

www.FlashTrackLighting.com